



PTZLCD3DW Controller Instruction Manual:



The top row of 12 Buttons are a type of accessory buttons that will not be used for the application you will be using the controller for.

The 6 buttons on right hand side closest to the joystick are your manual camera functions i.e. **Wide** = zoom in, **tele**=zoom out, **open** & **close** will be how you open & close the menu, **near** & **far** are your focusing buttons.



This is your main buttons that you will use on the controller. -You press **95 pre** to enter the menu of the camera if need be. - To display the menu of the controller to ensure that everything matches the camera (baudrate, protocol & camera ID), press and hold **shi** & **set**, do the same to remove this menu. This you

would do if you are having troubles with controlling the camera, verifying that you are still on the same settings as camera.

- Please note that pressing the **prev** & **next** button this will change the ID of the camera i.e. If your on camera ID 01 it will change it to camera ID 02, so if your camera ID is 01 and the controller is on camera ID 2 then it will not control your camera. Please remember for cases you don't have control.

You can also use the joystick for zooming out by turning the knob clockwise and zoom in by turning counter clockwise.