

SIREN KIT SETUP GUIDE



Precision
GAM

A Brand of



"Trusted Quality, Trusted Support, Trusted Service!"

INSTALLING THE SIREN KIT FOR DAKOTA ALERT


DRIVEWAY ALARMS

First, mount the siren outside at the desired location. Make sure the mounting location is within 20 feet of the receiver so the cable will reach. If you need longer cable you can extend the cable with any 2 conductor cable that is 18 gauge or better. We can also supply a longer cable upon request.

Run the cable inside the house to the location where you intend to have the Dakota Alert receiver.

Please consider your environment, neighbors and local laws when mounting the siren as it is extremely loud and sounds similar to a police siren.

The siren should be mounted with the cone at a slight downward angle so it does not fill with water.

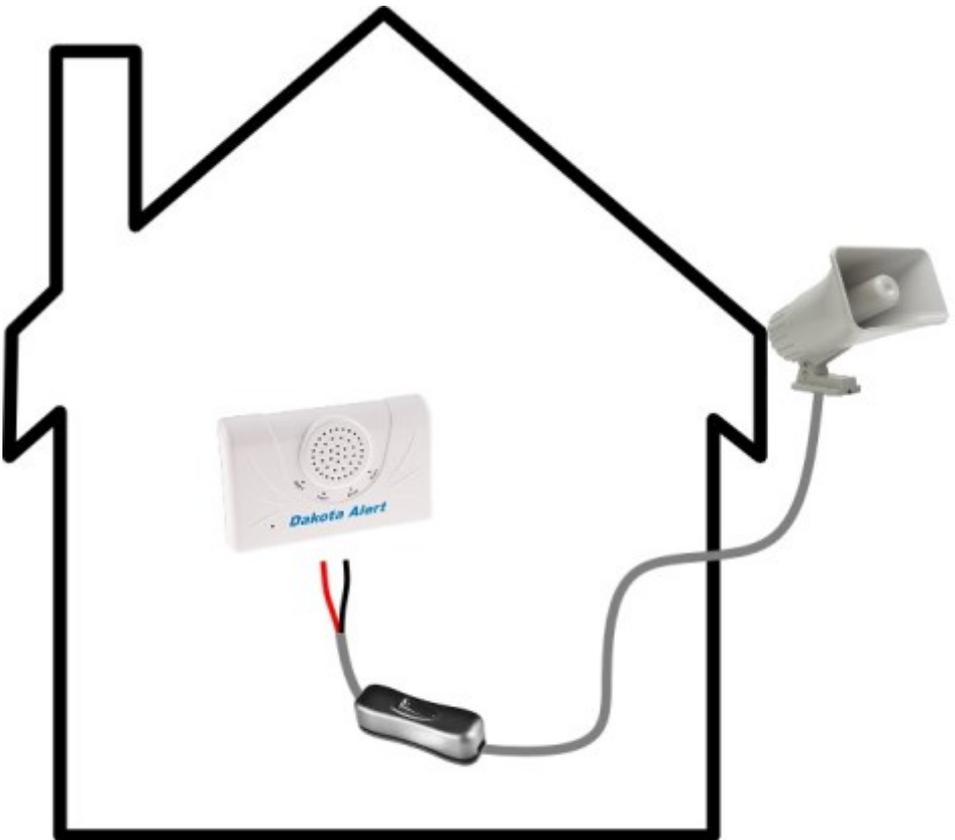



Unplug/or unpack the receiver for your Dakota Alert driveway alarm system . Please note this receiver comes with your driveway alert system not the siren kit itself.



Remove the front cover of the receiver by carefully prying at the 2 clip locations on the bottom of the receiver with a small flathead screwdriver.




Once the receiver is open, locate the terminals marked “12v out”.

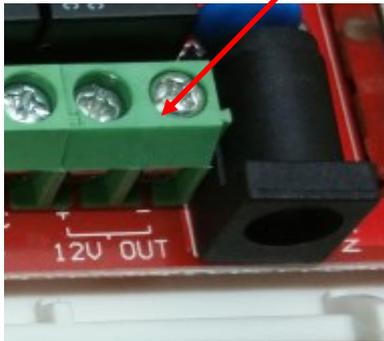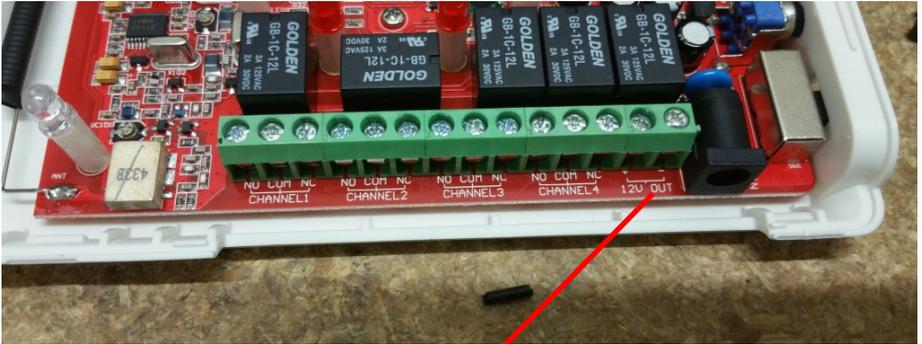

Using a small Phillips or flathead screwdriver, loosen the screw terminals.

Insert the bare end of the red wire into the “+” terminal and the black into the “-” terminal.

Tighten the screw terminals and replace the cover on the receiver.

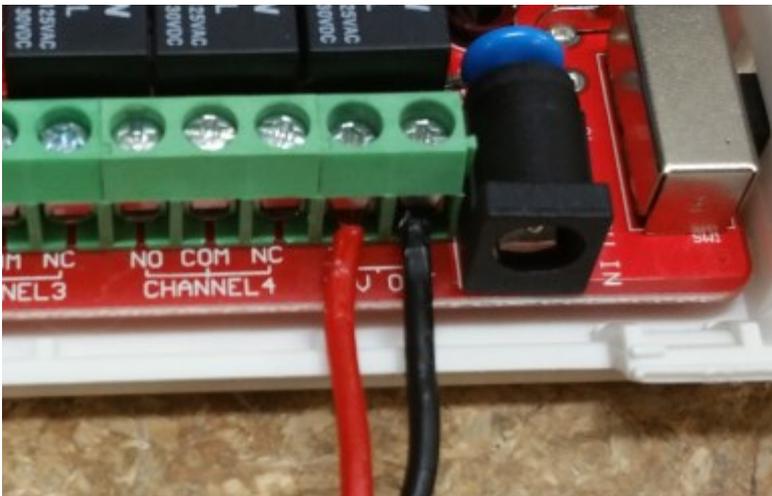

Now plug in the receiver using the black 12V 1A (or higher) power supply that came with the kit . Do not use the white 12V 500mA power supply that comes with the receiver as this one cannot supply enough power to run the siren.



The inline switch (below) allows you to disable the siren while still being able to use your driveway alarm system normally.

To test your installation, make sure the switch is in the on position and trigger the driveway alarm. The siren should sound for 1 second then shut off. See how to change the siren activation time on the next page.


WARNING: The siren is extremely loud! Keep it away from yours or anyone else's ears while testing the unit.




SIREN ACTIVATION TIME AND ZONE SETTINGS

You can change how long the siren plays by changing the settings of the “J4” jumper on the receiver mainboard. To do this, pull the small plastic jumper off the pins and replace it next to the time setting you want. By default it will be set to 1 second.

You must power the receiver off and back on again before the new setting will take effect.

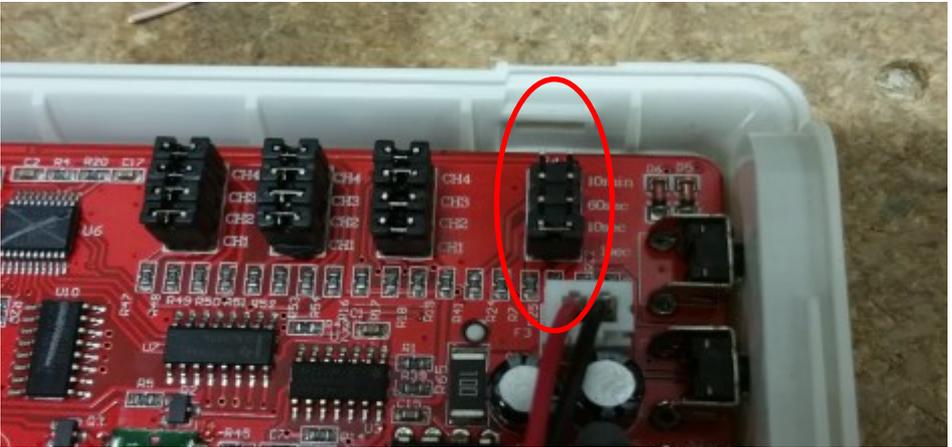

By default the siren is set to activate on all of the 4 zones. If you wish to change this setting, simply remove or add the jumpers in location “J1” on the receiver board. If there is no jumper present, that zone will not activate the siren. If the jumper is present, that zone will activate the siren.

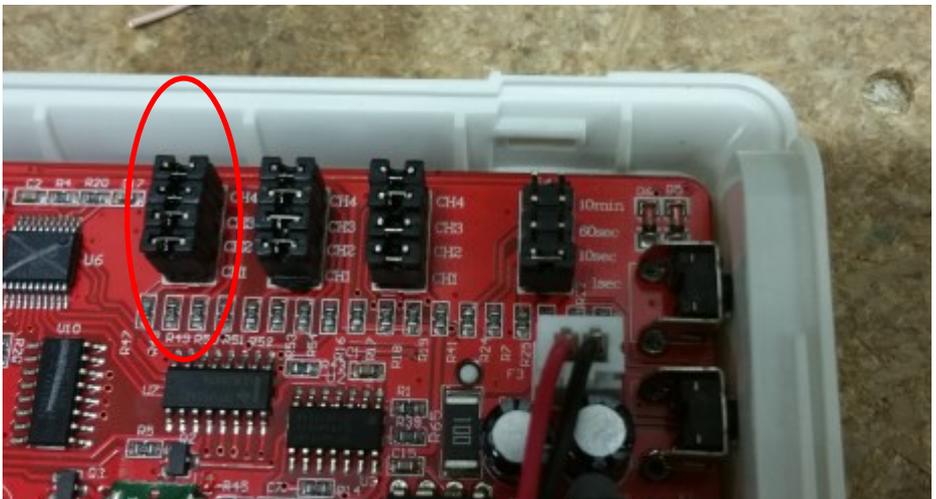

EXIT DELAY

You can also enable an exit delay to stop the siren from activating when you leave your property. To do this, press the “B” button on the side of the receiver. Once activated, the green light on the receiver will start flashing. This will prevent the system for activating for 5 minutes.





A Brand of



"Trusted Quality, Trusted Support, Trusted Service!"

and



Allen Leigh Security and Communications Ltd.

545 Assiniboine Ave
Brandon, MB R7A 0G3

Tel: 204-728-8878

Toll Free: 1-866-289-8164

Fax: 204-725-2234

Email: info@allenleigh.ca

Web: www.allenleigh.ca