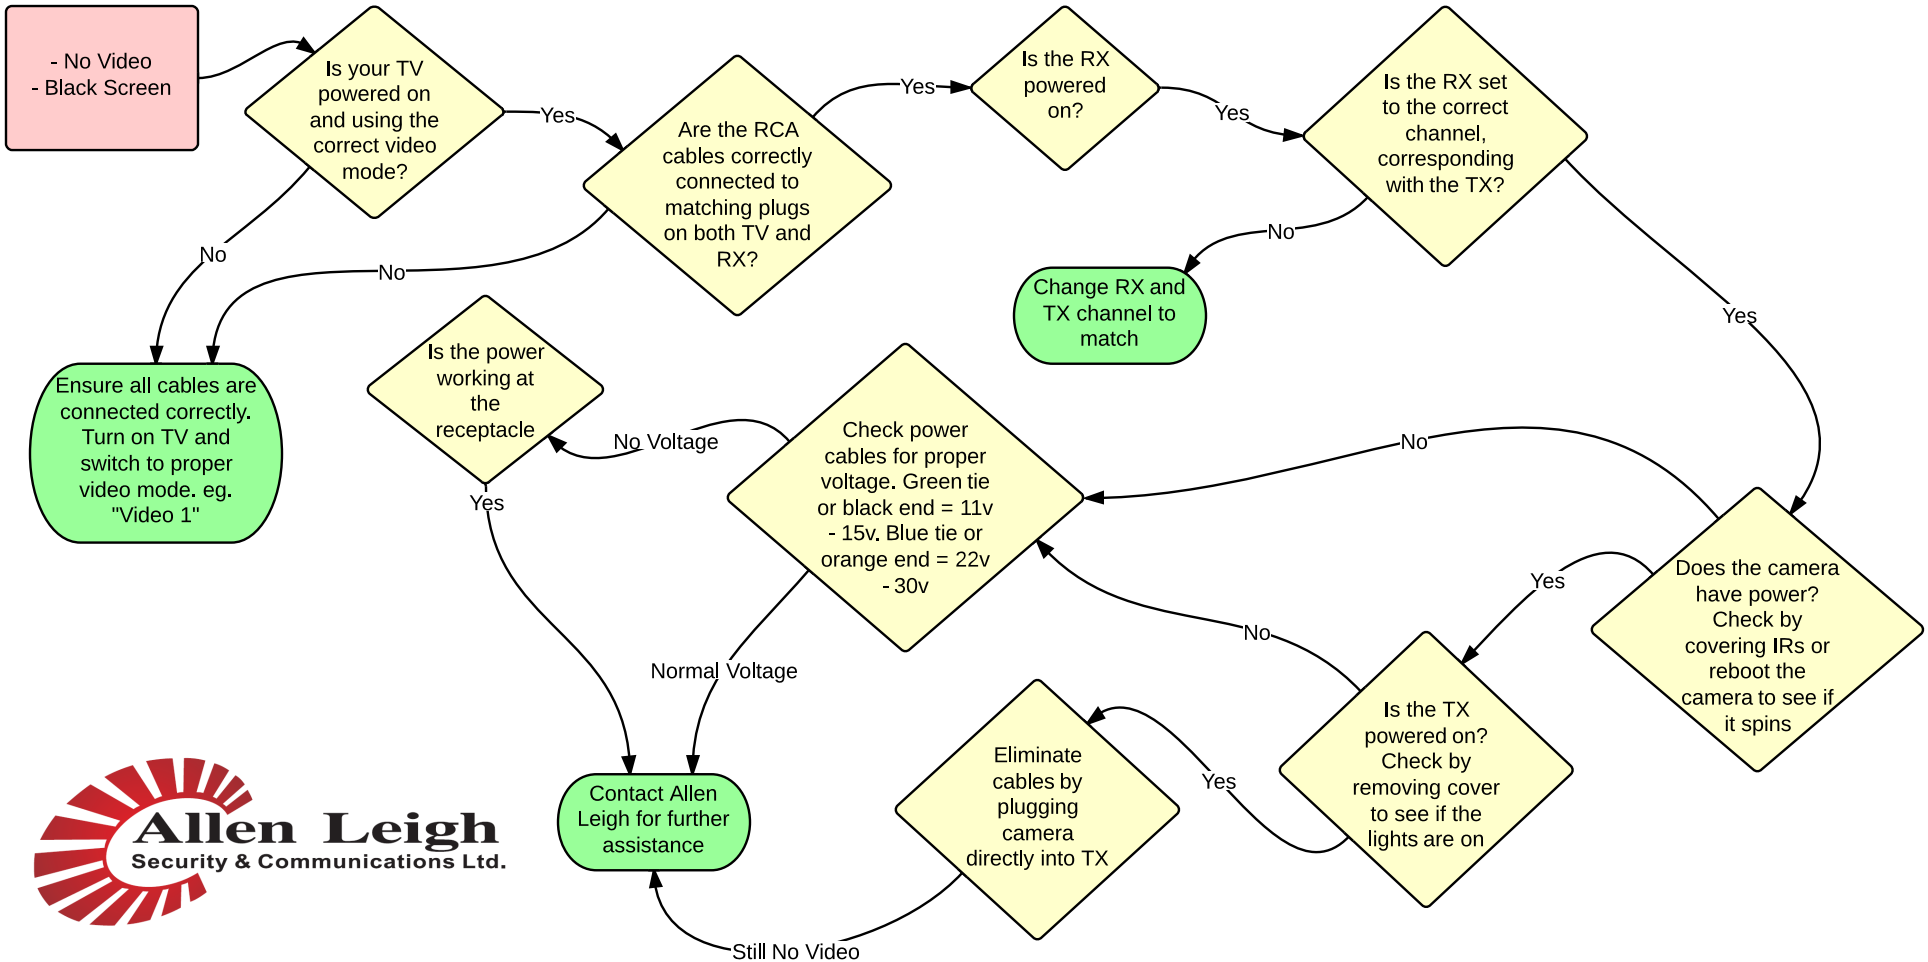
- No Video
- Black Screen
Is your TV powered on and using the correct video mode?
Yes
No
Ensure all cables are connected correctly. Turn on TV and switch to proper video mode. eg. "Video 1"
Are the RCA cables correctly connected to matching plugs on both TV and RX?
No
Yes
Is the RX powered on?
Yes
Is the RX set to the correct channel, corresponding with the TX?
No
Change RX and TX channel to match
Yes
Is the power working at the receptacle
No Voltage
Yes
Check power cables for proper voltage. Green tie or black end = 11v - 15v. Blue tie or orange end = 22v - 30v
No
Normal Voltage
Does the camera have power? Check by covering IRs or reboot the camera to see if it spins
Yes
No
Is the TX powered on? Check by removing cover to see if the lights are on
Yes
Eliminate cables by plugging camera directly into TX
Contact Allen Leigh for further assistance
Still No Video
Allen Leigh
Security & Communications Ltd.